



COMPATIBLE VALVE/CARTRIDGE CHANGE GUIDE


For use with the following **San Marco: Dayton**



IMPORTANT! BEFORE YOU BEGIN

Replacing the valve/cartridge of the above taps is a straightforward procedure for any competent handyperson. However, should you have any doubts about your ability to tackle the task, we suggest you engage a suitably qualified professional.

You can also gain hints and tips about replacing a valve by watching our installation movies at TapSparesUK.com.

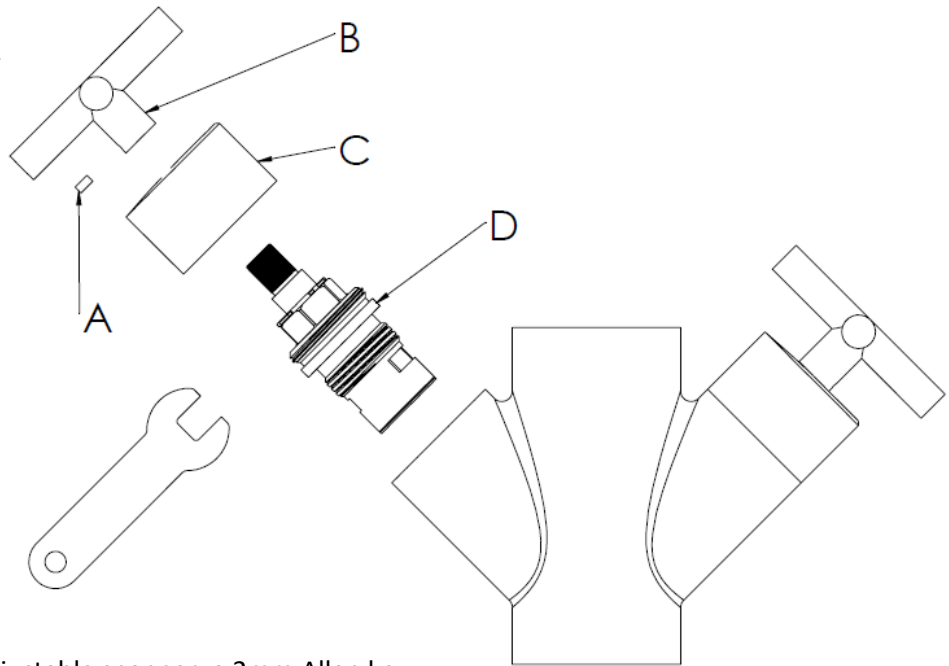

ESSENTIAL TOOLS

17 mm ring spanner or suitable adjustable spanner, a 2mm Allen key.

VALVE/CARTRIDGE CHANGE PROCEDURE

1. Turn off the water supply to the tap.
2. Unscrew the grub screw (A)
3. Then, pull the crosshead lever (B) away from the main handle assembly.
4. Next, unscrew the cover (C) from the valve.
5. Using a 17mm ring spanner or suitable adjustable spanner, unscrew the old valve (D).
6. Select the correct valve. The valves are identifiable by the notches on the hexagon drive. If it has notches then it is the hot valve.
7. Screw the correct valve into the correct position and tighten firmly.
8. Check the spindle of each valve is in the closed position and then align the handle as close to vertical as you can manage. If the handle is not exactly vertical, slide off the handle and re-position it by rotating it one or two notches then refit the handle. Repeat this procedure until you are satisfied with the handle alignment.
9. Next, refit the handle and tighten it carefully to secure it in position. Do not over-tighten.
10. Turn the water supply back on and check for leaks.